


15/16 inch



Remove and replace alternator pulley.



Torque Value: 80 N·m [60 ft-lbs]

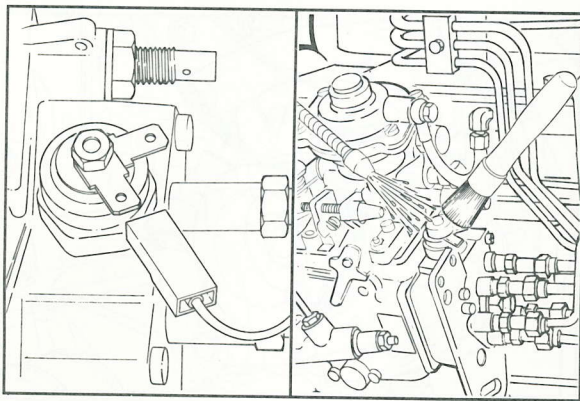


### Electric Fuel Shut Off Valve - Replacement



8mm

Remove the electrical wire from the valve. Clean the area around the valve thoroughly.

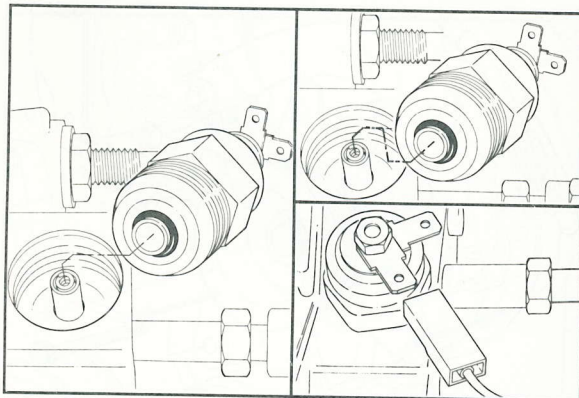

24mm




**Caution:** When removing the valve, be careful not to drop the piston and spring from inside the valve housing.



Replace the valve and connect the electrical wire.

Torque Value: 43 N·m [32 ft-lbs]

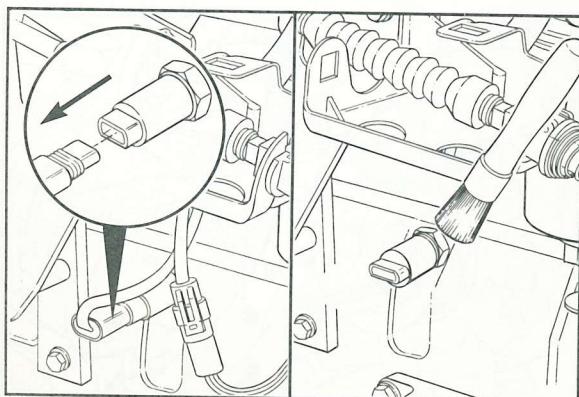

### Oil Pressure Switch - Replacement



Remove the electrical connector from the switch. Clean the area around the switch thoroughly.