

- FUEL TANK
- 87654321
- FUEL SUPPLY LINE TO PUMP UNIT
  PUMP/FILTRATION UNIT
  FUEL TO ENGINE MANIFOLD
  FUEL SUPPLY LINE TO INJECTION PUMP
  INJECTION PUMP
  RETURN LINE (NOTE: LINE WILL "T" INTO OVER FLOW TUBE NEXT TO FILLER NECK.)
  WIRE HARNESS FROM FASS FUEL PUMP TO POWER SOURCE

## INLET/OUTLET PORTS USED FOR PLUMBING ARE MARKED AS FOLLOWED:

- "T the fuel line from the fuel tank enters this port.
- "R" this is the return port back to the fuel tank.
- ťť, this is the port leading to the engine's lift pump.
- ίН, these are the heater ports for coolant, unidirectional. The heater DOES NOT HAVE TO
- BE USED and the read plugs can be left in place.
- ζ,, this is the gauge port. A 0-100psi gauge is recommended if any gauge is being used

1/2" allen head plugs have no function.